

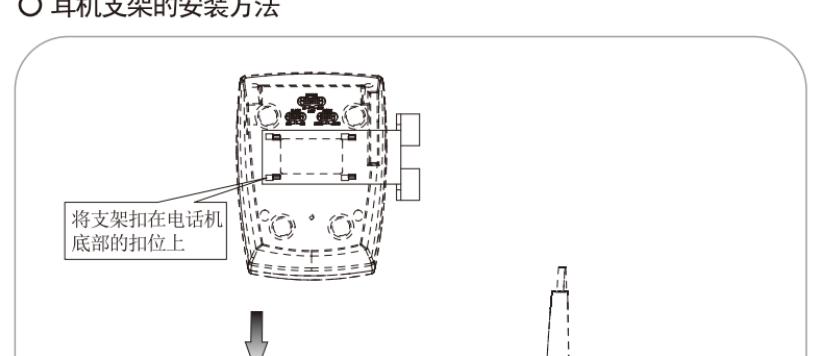
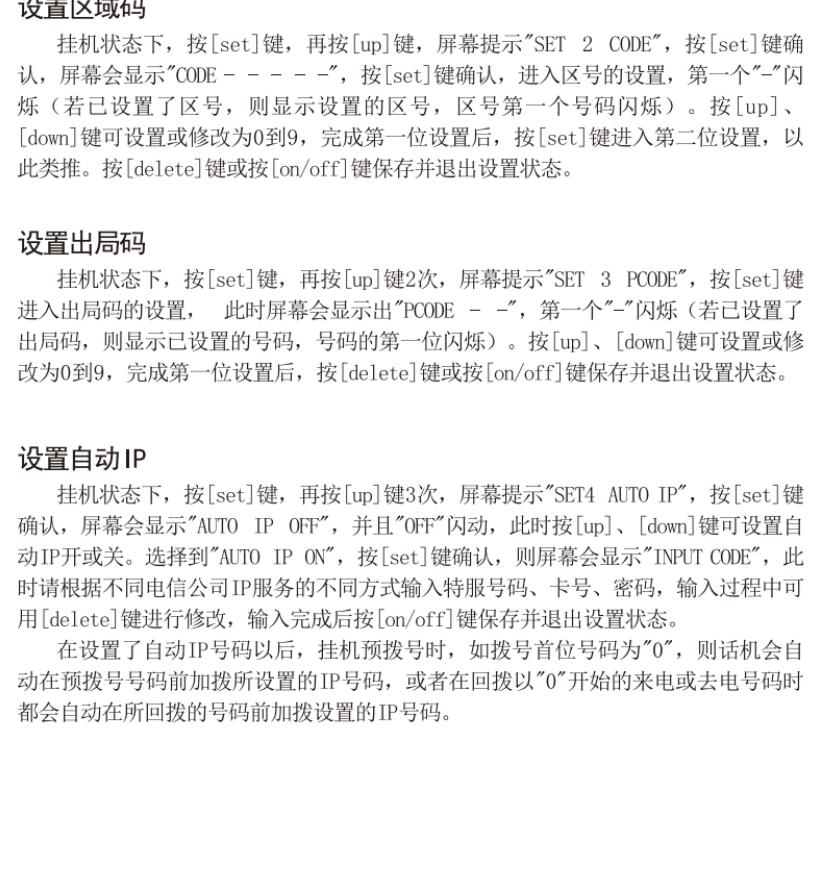


A black cordless telephone is shown against a blue and white background. The phone has a digital display screen at the top showing "Mobilteil 4. Telefon" and "xtion". Below the screen is a small red logo. The keypad features large, clear numbers from 1 to 9, with additional function keys like "auto", "up", "down", "bright", "out", "hold", "mute", and "menu". The handset is connected by a black cord.


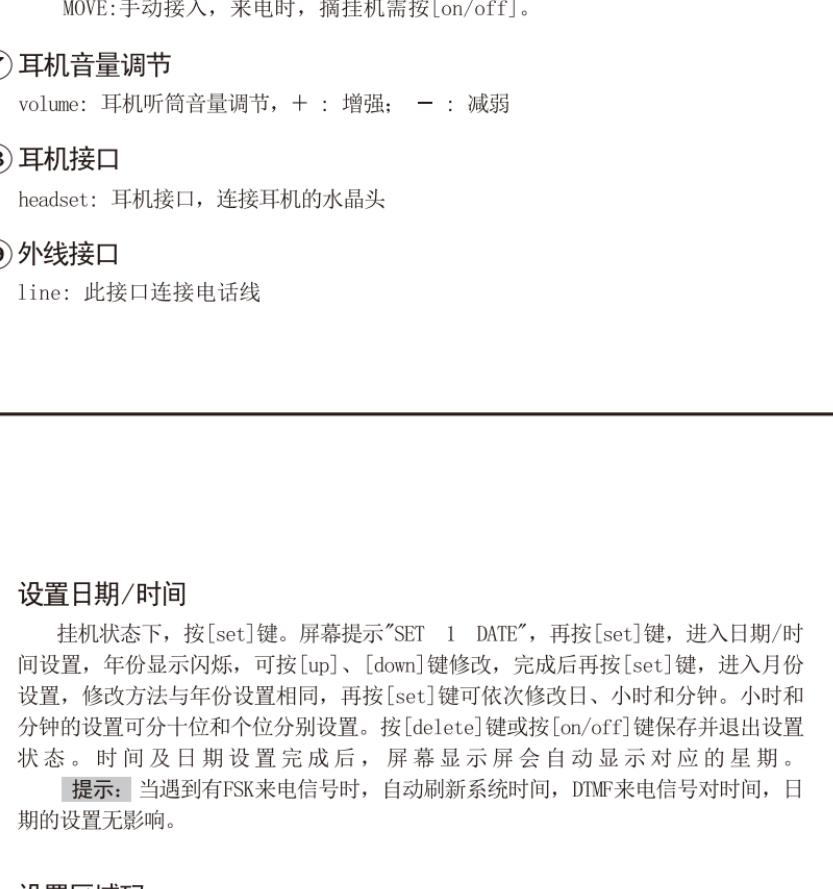


The diagram illustrates the connection of an external power source to a device. On the left, a circular power cord is shown. A plug is connected to one end of the cord, which is labeled '外线' (External Line). The other end of the cord is connected to a rectangular device, likely a power adapter or surge protector, which has multiple ports for plugging in other components.

- 此接口连接耳机
- ## 耳机使用方法
- 
- 
- ## 电话机功能图示
- 
- ## 按键功能说明
- ### ① 屏幕
- 当插入电话线后，屏幕将显示初始日期；有来电时，屏幕白灯闪亮；
- 摘机时，屏幕的白灯一直亮着
- NEW: 闪动时，说明有新的来电没有接听或没有查阅。
- REP: 查阅号码时，若出现此标志，说明该号码为重复来电。
- ### ② 自动接入和闭音指示灯
- auto: 当电话机的接入模式为自动时，摘机时，指示灯为红色，起提示作用
- mute: 通话时，如按下[mute]按键，指示灯为红色
- 通话时，如按下[hold]按键，指示灯为绿色

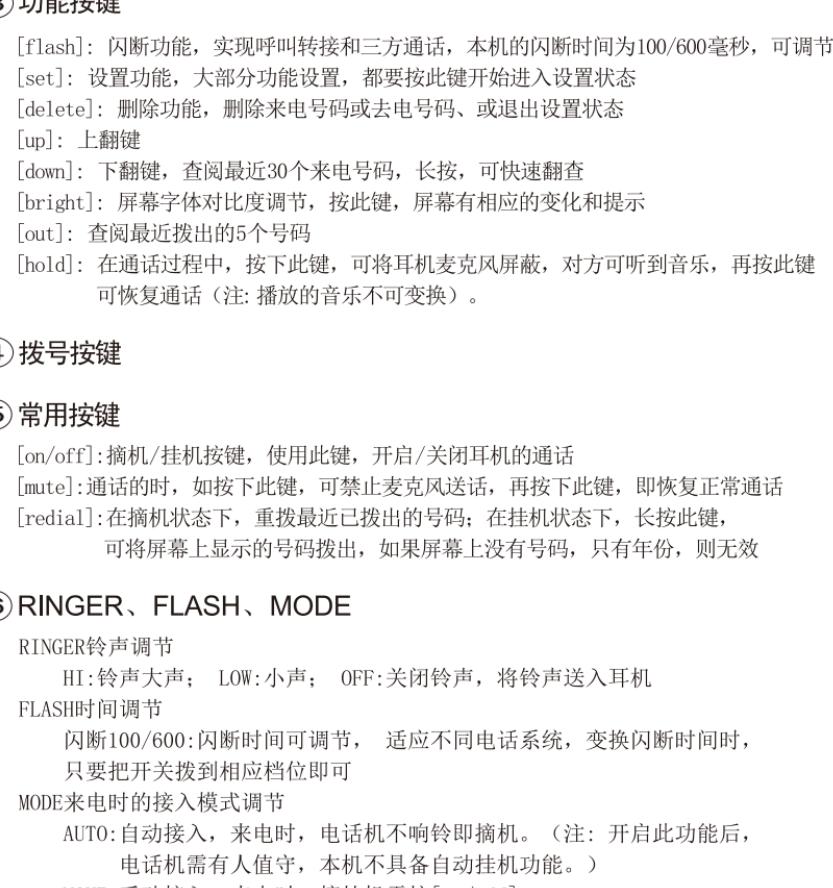


---

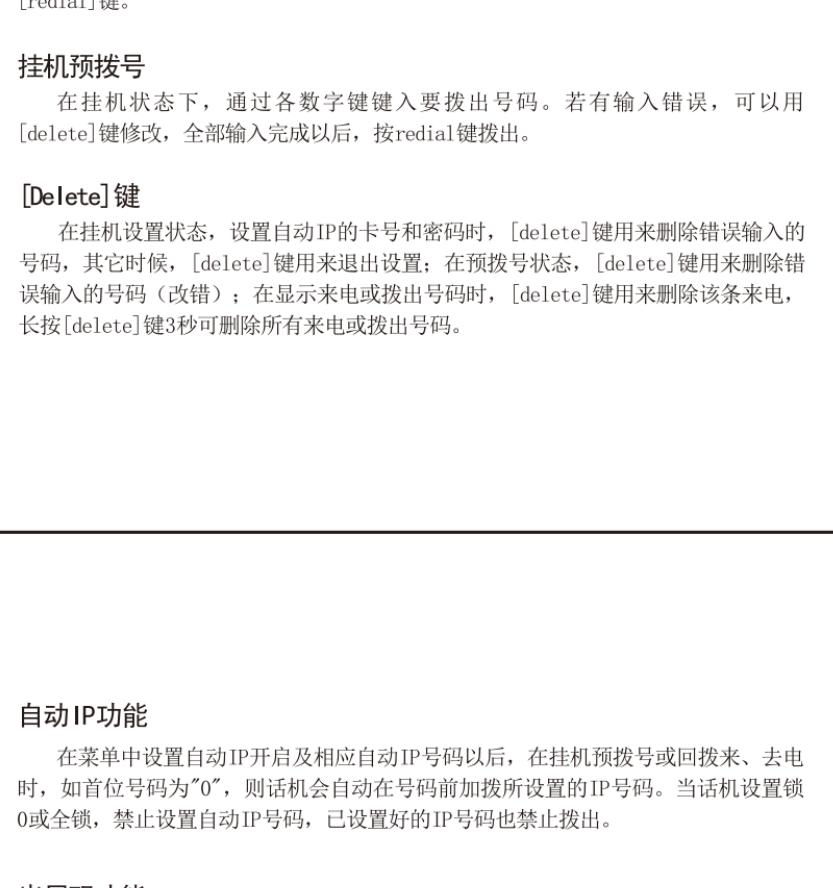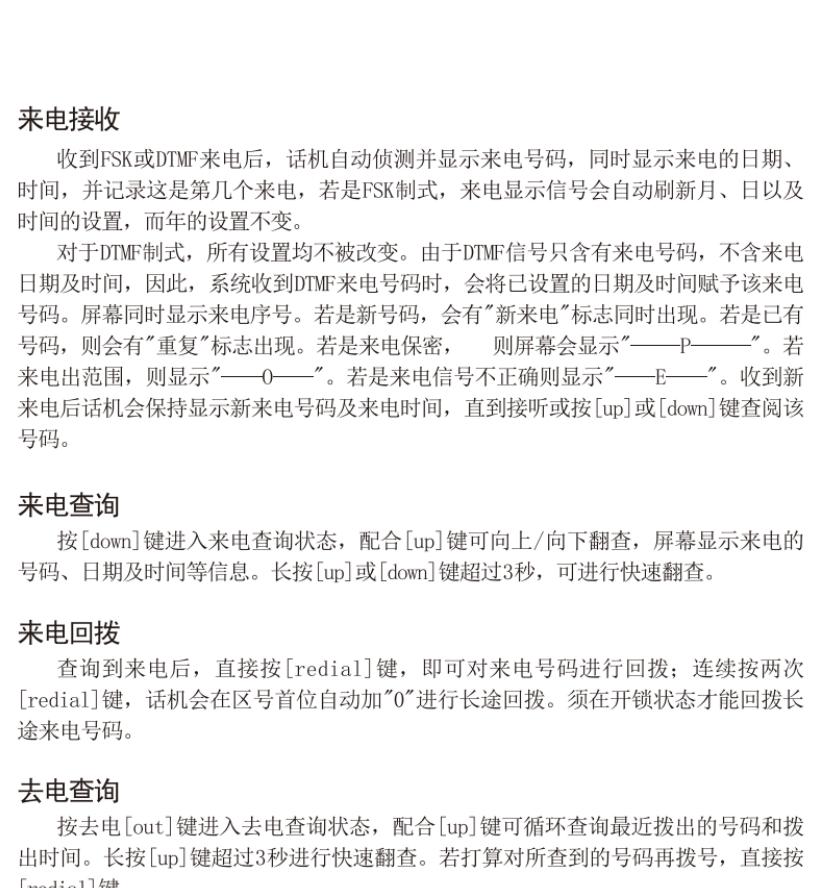

在菜单中设置了出局码后，在回拨来电或预拨号码时，若号码大于等于6位，话机会自动在来电或不含出局码的预拨号码前加出局码，而回拨去电则不添加出局码。当添加自动IP号码时，话机会先拨出局码后拨自动IP号码，话机在每次拨出出局码后自动暂停1S，以适应各种交换机。话机不锁出局码，锁出局码之后的号码。

---

For more information about the study, please contact Dr. [REDACTED] at [REDACTED].

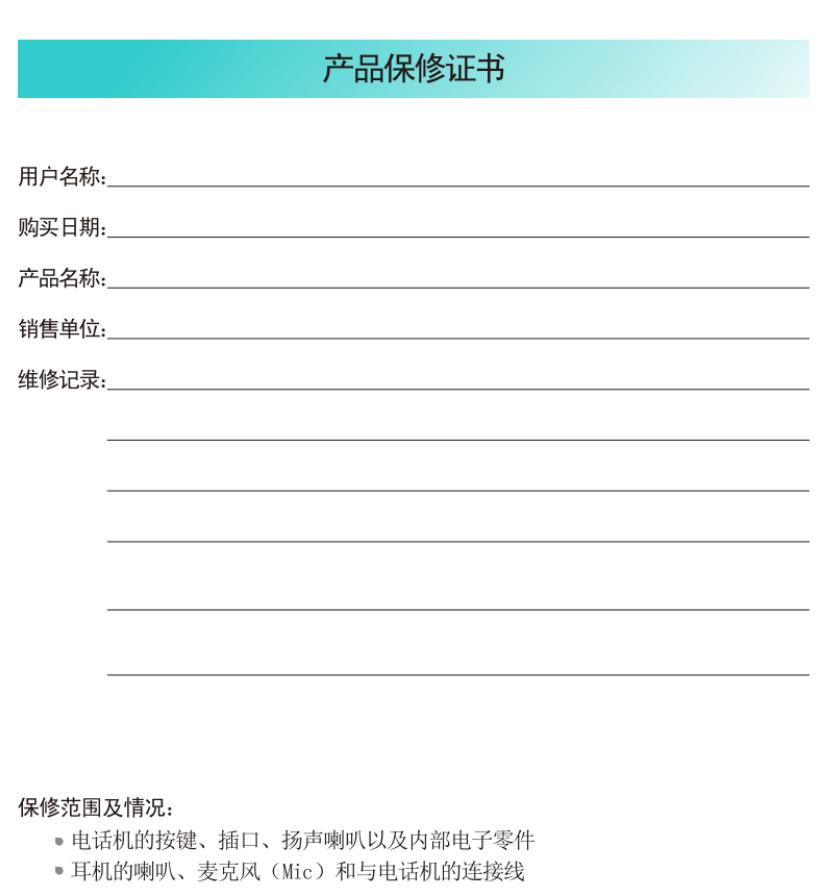

- 电话机或耳机不能通话，或通话的声音弱小，不能调节
- 电话机按键失灵或出现故障



LCE组件	○	○	○	○	○	○
其他部件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

0:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

